Our Product Introduction

Full Band Coverage: Compatible with 2G, 3G, 4G, and 5G signals from all carriers, suitable for various mobile devices, and

comprehensively enhancing signal quality. **High-Efficiency Signal Boosting:** Utilizing the latest signal enhancement technology, it effectively covers an area of 2000 square feet, ensuring strong signal coverage whether at home, in the office, or in the basement.

10W 40dbm Cdma Fiber Optic Signal Booster Far End Signal Strength **Amplifier 94db**

Basic Information

• Place of Origin: Guangdong, China


• Brand Name:

ul/FCC ID/UKCA/ ISED-Category I CERED(ELECTRIC) Certification:

 Model Number: • Minimum Order Quantity: 2 • Packaging Details: 34*24*22 • Delivery Time: 5-7 work days

L/C, D/A, D/P, T/T, Western Union, MoneyGram • Payment Terms:

Supply Ability:

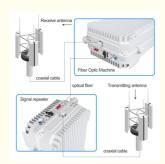

Product Specification

• Highlight: cdma fiber optic signal booster, signal strength amplifier 94db, far end signal strength amplifier



Product Description

Product Description 10W 40dbm Supper Power Cdma Optical Fiber Cell Phone Signal Booster Far-end Signal Strength Amplifier 94db





- Receiving antenna: The BTS end is used to connect the receiving antenna.
 Power: 24V power supply is connected here.
 About the signal light

Specifi	aatian
Specili	CallOH

Model	JY825	
Parameters of the project	Index requirements	
Frequency Range	Uplink	Downlink
700MHz	699-716MHz	729-726MHz
850MHz	824-849MHz	869-894MHz
800MHz	832-862MHz	791-821MHz
900MHz	880-915MHz	925-960MHz
1700MHz	1710- 1755MHz	2100-2155MHz
1800MHz	1710- 1785MHz	1805-1880MHz
1900MHz	1	1930-1990MHz
2100MHz	1920- 1980MHz	2110-2170MHz
2600MHz	2500- 2570MHz	2620-2690MHz
2300MHz	2300MHz	2400MHz
2500Mhz	2495MHz	2695MHz
3500MHZ	3300MHz	4200MHz
In-band intermodulation attenuation out-of-band (off-	S-36dBe/30Kz	
frequency)	9KHz-1GHz<-36dBm/100kHlz	
CSM/DCS	Strip edge 2.5y outside	1GHz-12. 75GHz<- 33dBm/IM2
Out-of-band inhibition of AB	2.5 MI f_offset < s < 5 Mz	> 40
	5 Mz Sf offset	> 60
Maximum permissible input level (dBm	10	10
Standing wave ratio of input and output voltage	S1.5	
Time delay (us)	< 5	
Time delay adjustment range (US)	> 100	
Optical power (JBm)	9	
Light Receiving Sensitivity (DBM)	20	

Light transmission distance (km)	> 20	
Power supply	Near and far end machine: AC220V±20%,50±511Z	
Size (mm)	Air coupling type proximal, distal: 460x380×180	
Weight (kg)	Coupled near end and far end machines: <20	
Monitor the way	RJ-45	
The work environment	1, working environment temperature :-20 ~55 ;	
	2, working environment humidity: 15% ~ 95% 3 pressure: 70-106KP:	
	4, protection level: waterproof and dustproof performance in line with the 1P65 standard	

(1)LA: No light alarm, generally will not alarm, unless the laser does not emit light.

---- Internal power indicator of the module (2)PWR: power indicator -

(3)PA: receives no light alarm ------ An alarm is generated when no optical signal is received


(4)PA: There are two types of alarms

Instructions

- Installation Method:

 1. Find the strongest direction and position of the received signal for mobiles at the top or the periphery of the building, as the
- In this discontinuous and position of the received signal for mobiles at the top of the periphery of the building, as the location for installing the outdoor antenna, pay attention that the location should be paid to lightning protection. The installation height should not be higher than the lightning protection network of the building. If it is higher than the lightning protection network. If it is necessary, install a lightning rod 1 meter above the outdoor antenna and ground it well.

 2. After selecting the appropriate location, fix the outdoor antenna to the wall or bracket.
- 3. Select an appropriate location in the relevant indoor location (close to the power supply and the outdoor antenna end, rain-proof, sunshine-proof and ventilation is best location) install indoor straight machine, and fixed to the wall or bracket.
- 4. Lead the outdoor antenna to the 'BTS' (outdoor) interface, and the connection between the outdoor antenna and the amplifier is completed.
- 5. After defining the indoor antenna installation position, fix the antenna.
- 6. The indoor antenna connected to the amplifier, one port connecting to the indoor antenna interface, and the other port connecting to the repeater's 'MOBILE' (indoor) port.

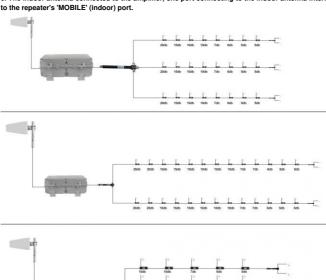

WHERE TO USE



















Greemblt Shenzhen Jiayi Technology Co., Ltd.





Factory Building 407, Building B, No. 41, Lixin Road, Danzhutou Community, Nanwan Street, Longgang District, Shenzhen City, Guangdong Province, PR China Zip 518000